



PN08

1. PN08

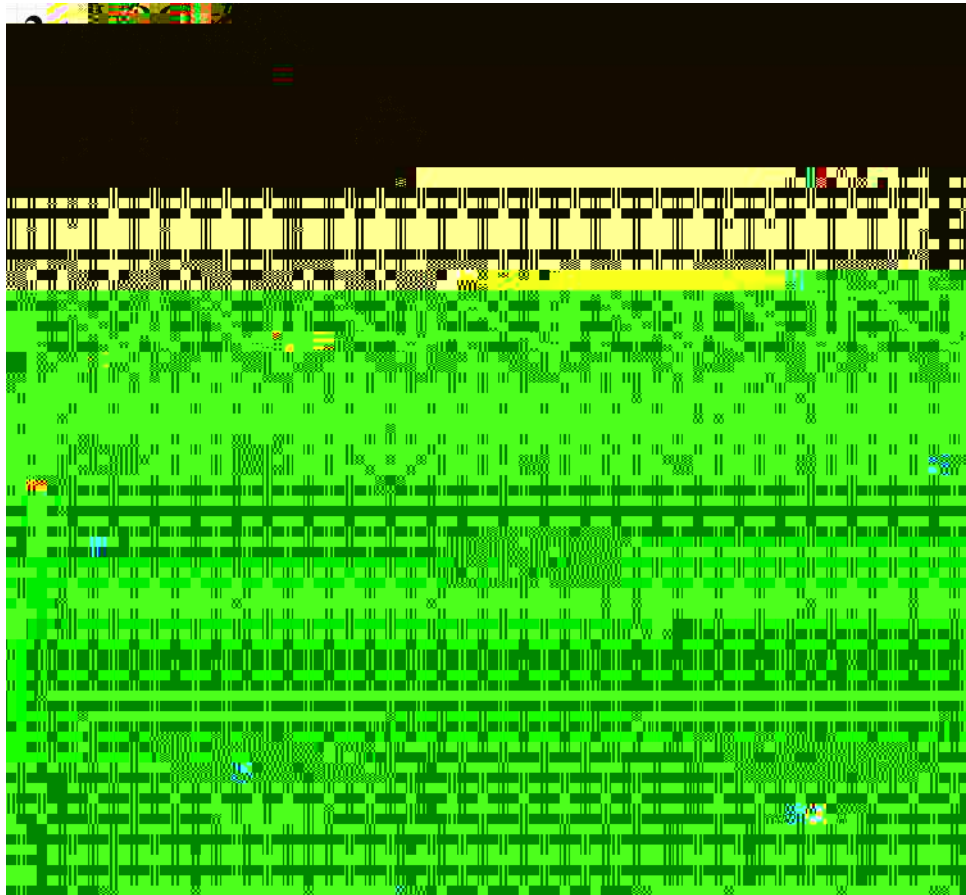


2.

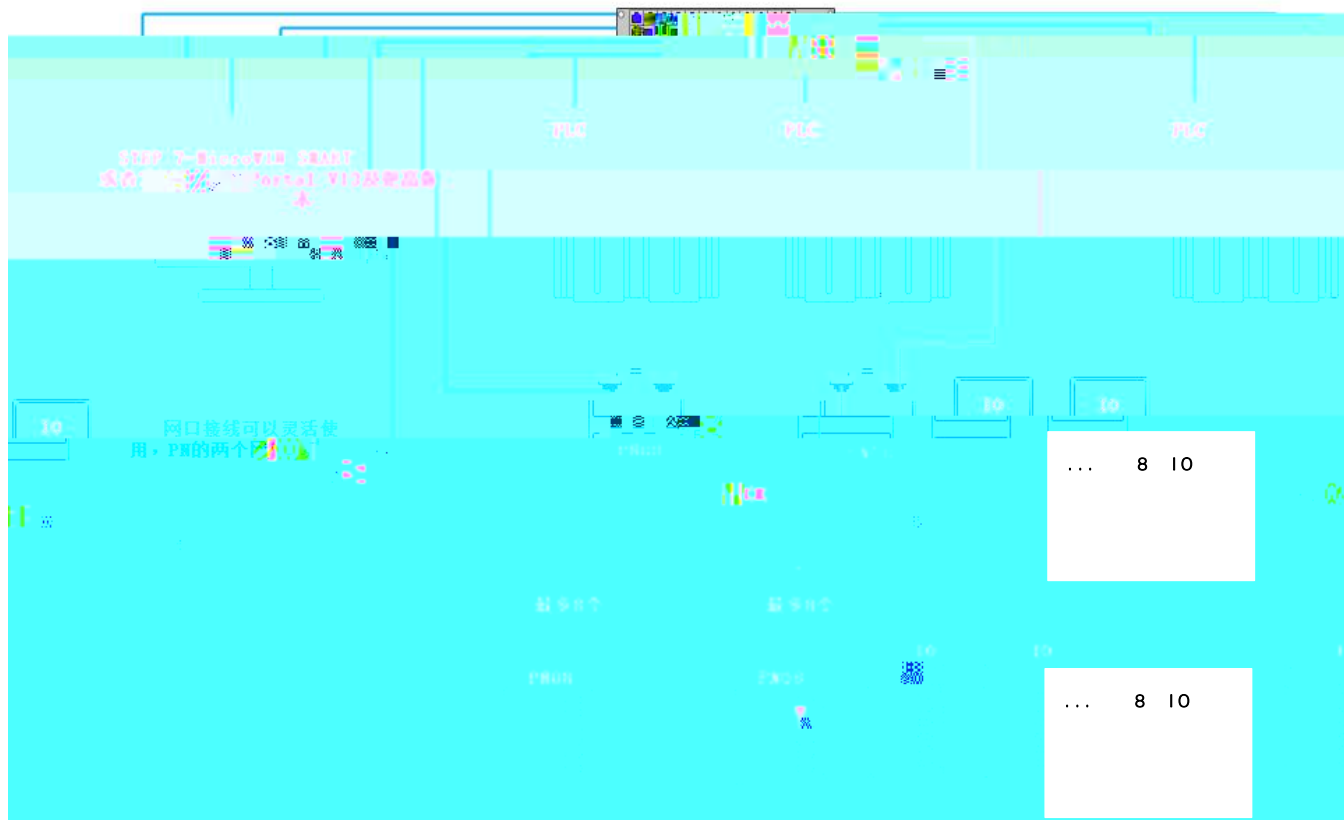


3. GSMDL



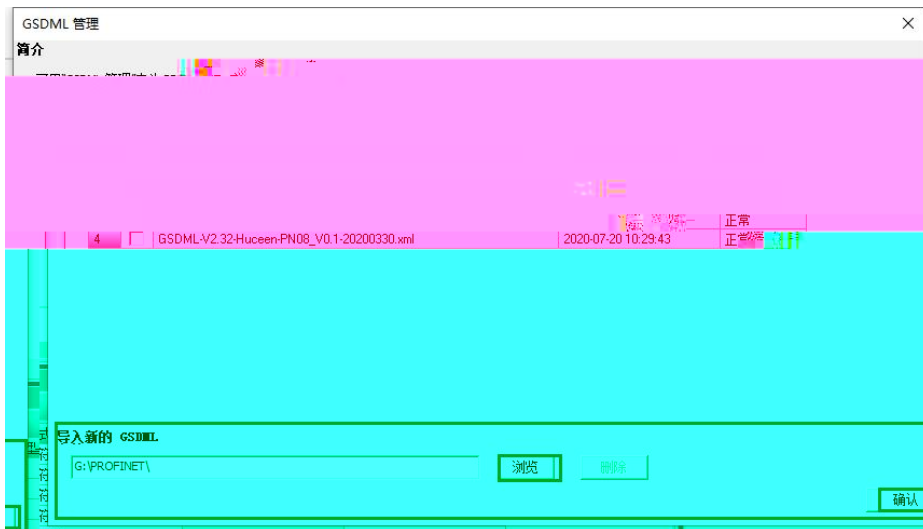

GSDML-V2.32-Huceen-PN08_V0.1-20200330

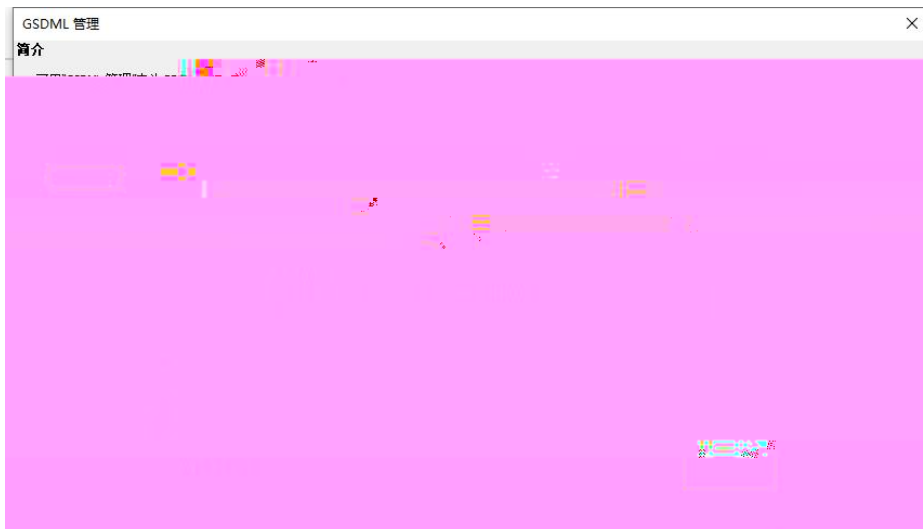

PROFI NET

4. PROFI NET







5. PROFI NET




PLC

IP

PLC

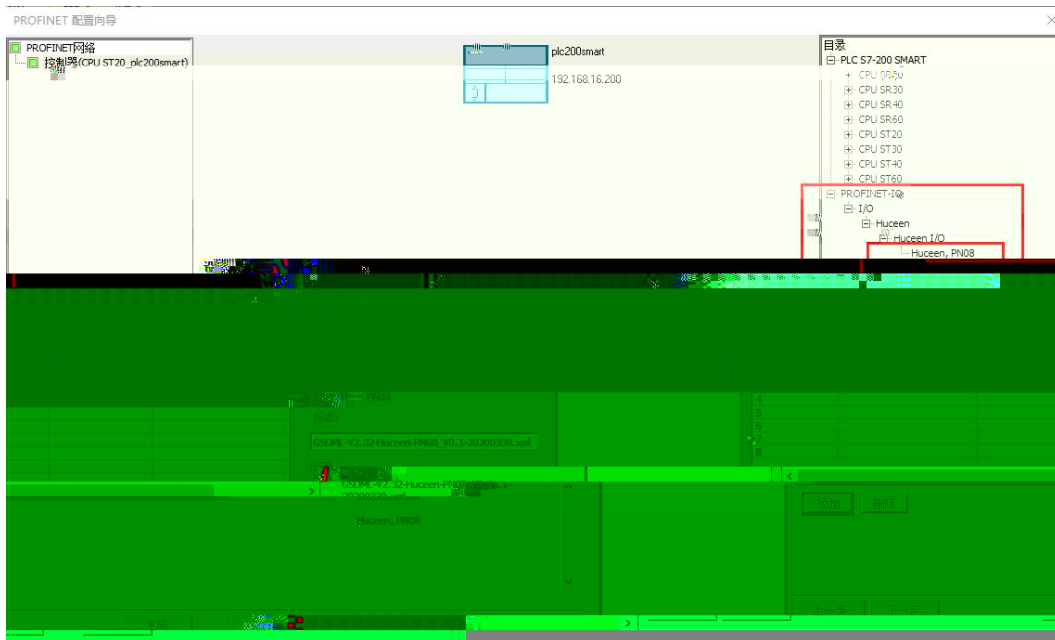
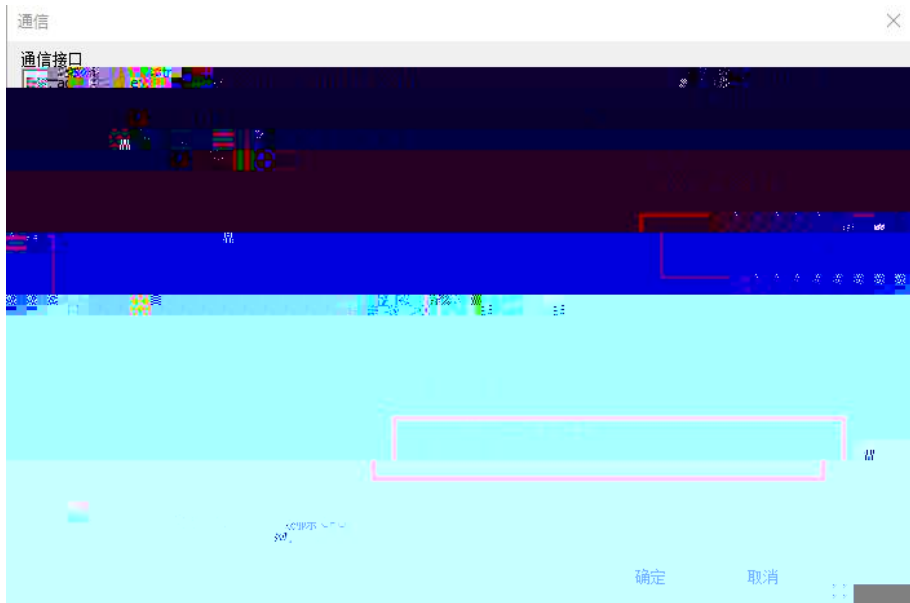


Huceen, PN08
IP (PLC)

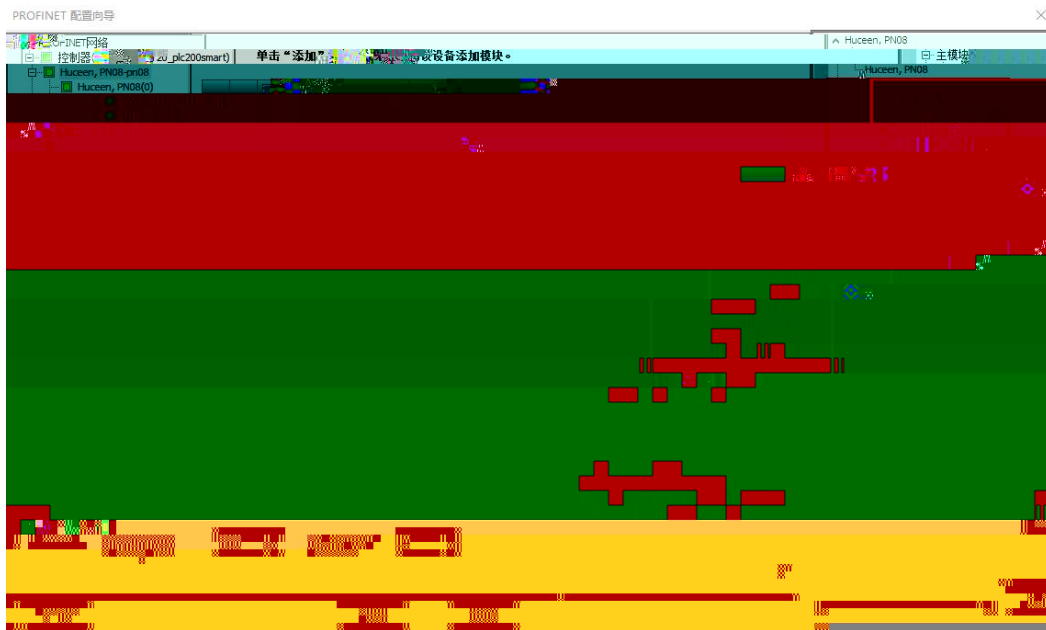

s7-200_SMART_system_manual_zh-CHS



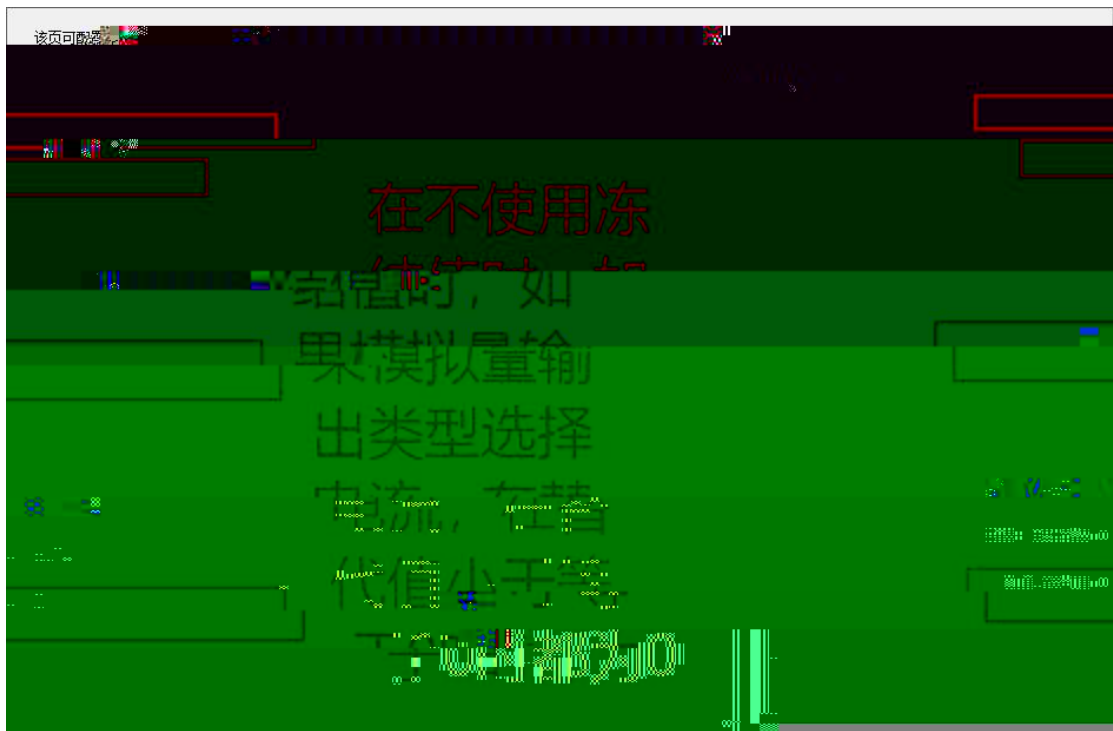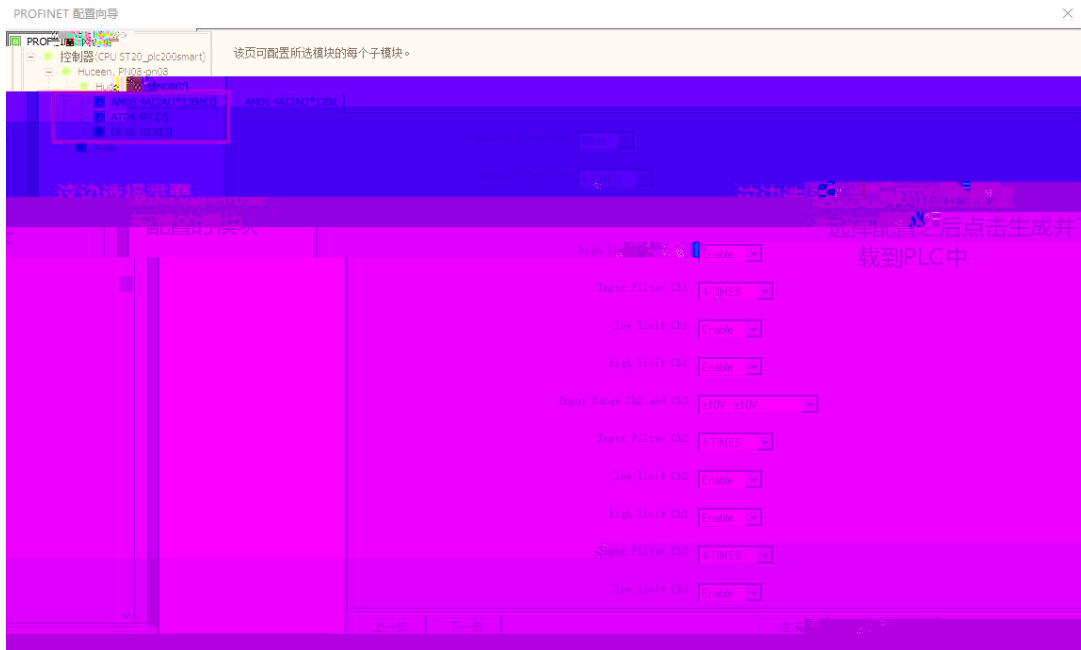

6.



I 128. 0 AM06 PN 128 I W128

	地址	格式	当前值	新值
1	QW128	有符号		
2	QW132	有符号		
3	QW134	有符号		
4	QW134	有符号		
5	IW128			

7.



1.

-- 2 LED

1. RUN --

2. STOP --

3. ERROR --

--

(CPU)

1. --

2. --

2 ()

-- 2 LED

--

--

--

V2.0